


The Large Generator is capable of powering three blower units to run the Wall-E bouncer/slide and the Sports Unit. Due to the high power consumption of these blower units during initial inflation—you will need to use the following procedure to inflate these two units.

- 1) Once the generator is running properly connect the two blower units for the Wall-E bouncer and let run until fully inflated (will only take a few minutes)
- 2) Turn one Wall-E blower unit off and let the remaining unit continue to maintain the air in the bouncer
- 3) Plug in the electrical cord for the Sports Galore blower unit and turn on blower until fully inflated
- 4) Plug in the 2nd Wall-E blower and turn it on to continue the maintenance of the Wall-E bouncer
- 5) All 3 blowers should now be running properly to maintain the air in both inflatables

Electrical Layout for large Generator

 = Blower Unit

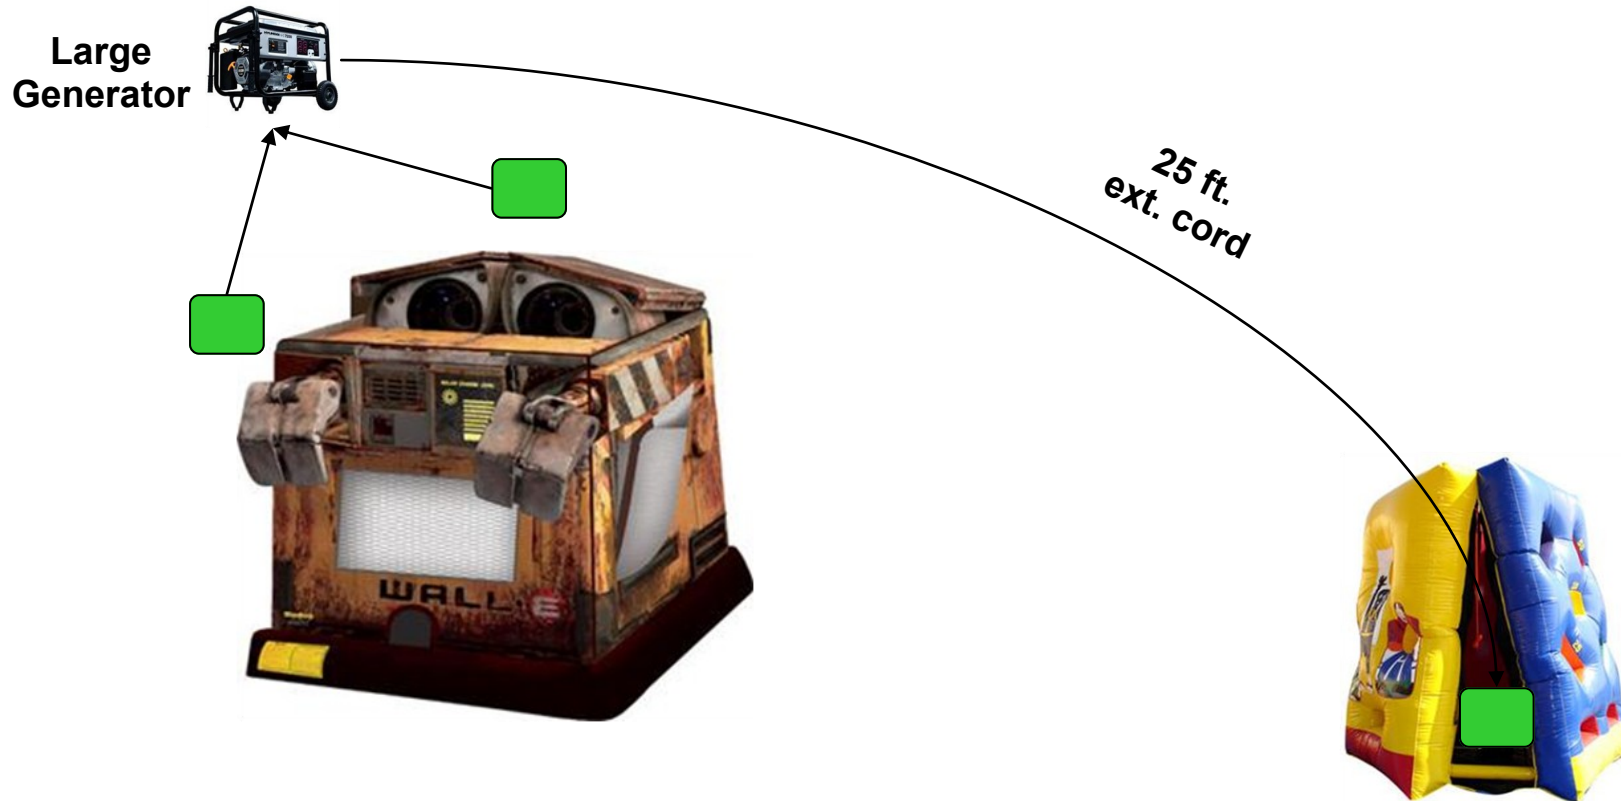

Electrical Layout for Small Generator

The Small Generator is capable of powering the small bouncer as well as the sound system, popcorn & snokone machines.

